



 



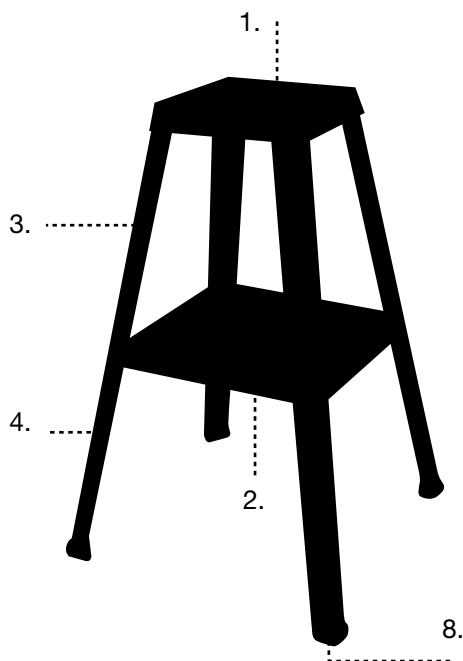



GreatNeck®

BENCH GRINDER STAND

Item No.	Description	Qty.
1	Seat 	1
2	Tool Tray 	1
3	Upper Leg 	4
4	Lower Leg 	4
5	Screw (not shown) 	24
6	Washer (not shown) 	24
7	Nut (not shown) 	24
8	Pad 	4



GreatNeck and/or its distributors have provided the parts list and assembly diagram as a reference only. Neither GreatNeck and/or its distributors make any representation or warranty of any kind to the buyer and/or user of this tool that he or she is qualified to do any repairs or replace any parts of this product. GreatNeck and its distributors expressly state that all repairs or part replacements should be done by certified or licensed technicians. The buyer assumes all risk and liability arising out of his or her repairs or parts replacement to the original product.

Assembly

- Place the pads (8) under each one of the four lower legs (4).
- Where the upper leg (3) connects with lower leg (4), there are four screw holes.
- Loosely connect an upper leg (3) with a lower leg (4) through the upper screw holes, using screws (5), washers (6) and nuts (7). Leave the lower screw holes empty for now.
- Repeat with the three other upper and lower legs (3 and 4).
- Set the grinder seat (1) over the top of the four leg assemblies, lining up the holes on the grinder seat (1) and the upper legs (3). Secure them using screws (5), washers (6) and nuts (7).
- Position the tool tray (2) into place.
- Insert screws (5) through each corner hole of the tool tray (2). Secure with washers (6) and nuts (7).
- Tighten all of the hardware.

GreatNeck® ONE YEAR LIMITED WARRANTY

If within one year from the date of purchase you find any defect in material or workmanship in this GreatNeck product, through normal usage, either return it to the place of purchase, or send it to GreatNeck Tools for repair or replacement at our discretion. In order to obtain this service send your tool and proof of purchase, transportation pre-paid, to GreatNeck Tools LLC Q.A. Dept., 3580 E. Raines Road #3, Memphis, TN 38118. We will not be responsible for lost or damaged goods during transportation, please insure your package.

GreatNeck does not provide any warranty for products labeled other than GreatNeck Tools LLC. GreatNeck will not provide any warranty for products subjected to abnormal use. Abnormal use includes, but is not limited to, abuse, accident, alteration, neglect, and unauthorized or unreasonable use or repairs. This warranty does not cover blades, bits, files, sheathes, cases, accessories, bulbs, batteries, calibration, or finishes. We recommend that you maintain your tools and sharpen or replace blades, batteries, bits and files as necessary. GreatNeck reserves the right to make any changes in construction or design at any time without any obligation in incorporating such changes to tools or equipment previously sold.

GreatNeck is not liable for consequential or incidental damages arising from the breach of this, or any other, warranty whether expressed, implied, or statutory. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

This product is not guaranteed if used for industrial or commercial purposes. Please visit our website for full warranty information. TOLL FREE HELPLINE: 1-866-458-2472.

CONTACT US

3580 E. Raines Road, Suite 3,
Memphis, TN 38118
(1-866-458-2472)

