

Adjustable Heavy Duty Pitman Arm Puller

Services cars and light trucks ¾ ton.
Can be used for other applications such as bearing, collar, and gear removal.

Forged adjustable jaws

Two clamp bolts lock jaws together

Not for impact wrench use

27170

INSTRUCTIONS

- 1. Remove fastener nut from Pitman Arm shaft
- 2. Adjust the jaws and pressure screw to fit evenly for pulling
- 3. Do not use impact wrench on pressure screw
- 4. After adjusting pressure screw on Pitman Arm shaft, tighten one or two turns more to apply pressure on shaft
- 5. Use large hammer to strike pressure screw so Pitman Arm will loosen from shaft
- 6. If Pitman Arm is still on shaft, tighten pressure screw another turn before striking with hammer

Caution: Always wear safety glasses

76812 27170

MADE IN TAIWAN